

Owners manual

PREFACE

You have purchased a our scooter, congratulations and thank you for putting your trust in us.

This model is a sturdy scooter in modern design.

Its sound construction, the meticulous selection of materials, the advanced manufacturing techniques and conscientious work of dedicated employees provides the scooter with all the characteristics such as economical operation, quality, reliability and its lasting value.

We cannot be held liable for any consequential damage caused by accessories not approved by the factory.

The scope of delivery and version of the scoter is solely determined by the purchase agreement concluded with the dealer.


This operating manual includes important in structions for handling your light scooter. Read it carefully, because professional handling combined with regular care and maintenance helps to maintain the scooter's value and is one of the requirements for warranty claims.

We wish you at all times a safe journey.

Yours

Safety symbols and notes

Please observe the following:

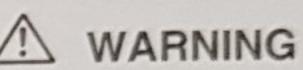


Precautionary measures against the risk of accidents, injury and /or death.

FIRE HAZARD

The vehicle is equipped with a catalyst, this results in extremely high temperatures on the exhaust system(risk of burning)

CAUTION

Important instructions and precautionary rules to avoid damage to the vehicle. Nonobservance can lead to the warranty becoming void.

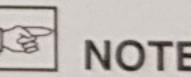

Special instructions for better handling during operation, inspection adjustments and service activities.

OVERVIEW AND OPERATIONIdentification number, engine number.3View of vehicle.4-5Instrument, handlebar instrument.6Ignition lock and fork-column lock.7Storage box, luggage hooks.8Fuel, fuel tank.9Tank cap.10Side stand, parking stand.11SAFETY TEST12Checklist.12Load and lights.13

Repairing paint damage / servicing the tyres......22

Lay-up commission.....22

Technical modifications, accessories and spare parts......23

SUMMARY AND OPERATION

CONTENTS

NOTES ON MAINTENANCE Engine oil.....

Engine oil	
Transmission oil26	6
Checking steering bearing, telescopic fork27	7
	8
Tyres	0
Front wheel brake	
Rear wheel brake3	1
Adjusting the play of the twist grip throttle control32	2
Cleaning the air filter33	3
Cleaning the spark plug3	4
Fuse3	5
	7
Dattery	
Changing the light bulbs38-4	1
Adjusting the headlight42	2

TECHNICAL DATA


	40
Engine	43
Power transmission	44
Chassis	44
Lubricants and operating fluids	
Electrical equipment	45
Dimensions and weights	46
WARRANTY AND SERVICE DATA	
Warranty conditions	47
List of wear items	
Inspection items	
Proof of maintenance	

Identification number

NOTE

ed from the driver.

underside cover.

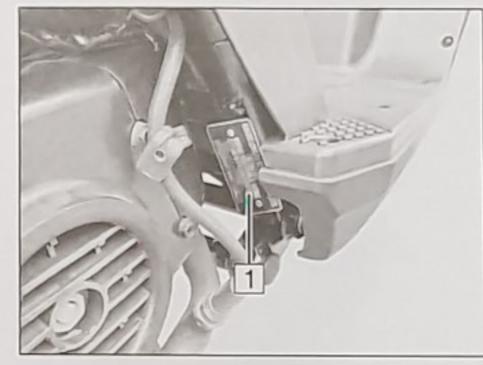


The description for right-hand side is view-

The identification number (1) is located on

the rear part of the frame below the right

Chassis number

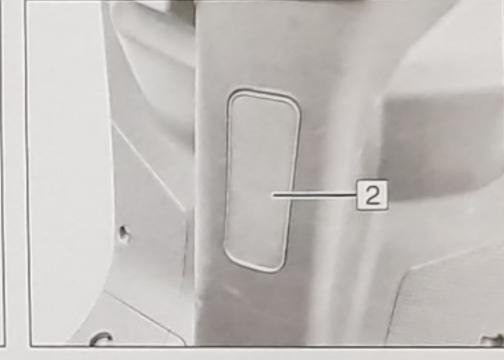

The chassis number is located on the frame behind the cover (2).

Engine number



The engine number (3) is located on the front part the left crankcase.

(ey

With the scooter you get two separate indefinite keys for:

- Ignition lock, storage box.

Keep the spare key at a safety place.

Right-hand side view

- 1 Storage box with tool kit
- 2 Spark plug
- 3 Engine oil filter cap
- 4 Battery box and fuse
- 5 Ignition and fork-column lock
- 6 Brake fluid container for front wheel brake
- 7 Handbrake lever for front brake




Left-hand side view

- 8 Handbrake lever for rear brake
- 9 Instrument
- 10 Kick starter
- 11 Parking stand
- 12 Transmission oil filler screw
- 13 Air filter
- 14 Side stand




OVERVIEW AND OPERATION


Instrument

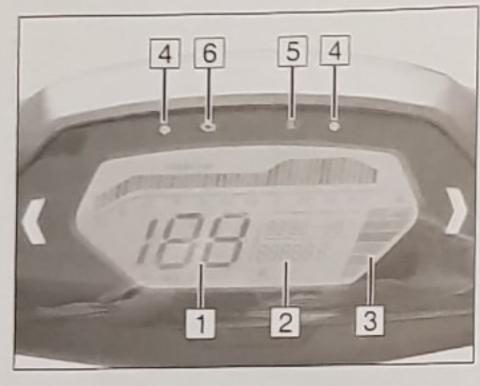

Handlebar instrument, left

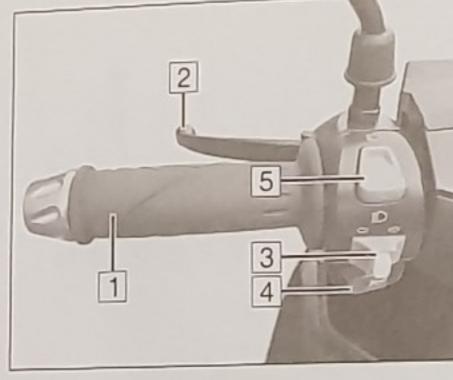

Handlebar instrument, right

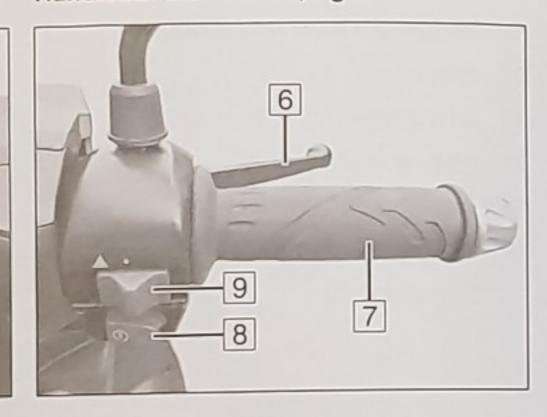

1 Speedometer

2 Odometer

3 Fuel indicator

Instrument lights

km/h/mph

4 Left and right direction indicator

♦ green

D blue 5 High beam indicator 6 Malfunction Indicator Lamp oranger

Switch to left Left indicator on

⇒ Switch to right Right indicator on Push button for switch off

4 > Push-button:horn

5 High beam indicator

high beam low beam

1 Fixed grip

2 Handbrake lever for rear brake

3 Direction-indicator switch


8 1 Starter button

7 Throttle

9 A hazard warning lamp switch

6 Handbrake lever for front brake

Ignition and fork-column lock

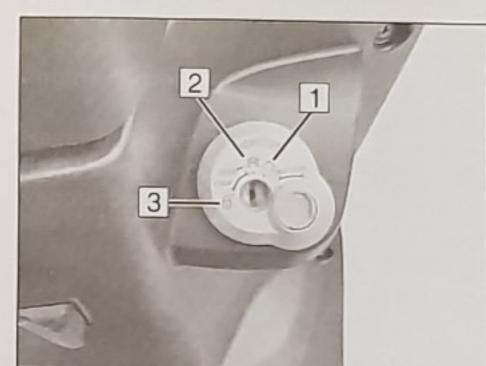

⚠ WARNING

While riding, do not switch the ignition off [X]!

NOTE

Keys

With the scooter you get two indefinite ignition keys. Keep the spare key at a safety place.

Key positions

NOTE

The key can be removed in positions and 🗐 .

(4) Open

Fork column not locked(handlebars can be freely turned to the left or right).

(5) Shut open

Use the tools of the keys, inset position 5 and turn it, the lock hole protector can be close or open.

(1) Operating position

Ignition and all circuits activated.

(2) Ignition off

Fork column not locked (handlebars can be freely turned to the left or right).


(3) Fork column locked and ignition off

Turn the handlebar to the left as far as to the stop.


Push and turn the key to the left until it is in the LOCK position. The fork column is now locked.

OVERVIEW AND OPERATION


Storage box

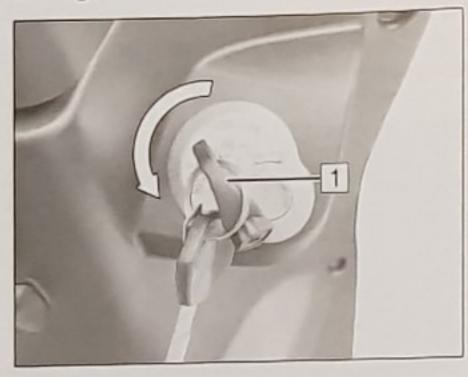

- Do not store valuables in the box.
- Make sure that the seat has been locked to the left to open. completely after it was pressed down.
- Take out valuables before washing to avoid wetting these objects.
- Do not place thermal sensitive objects in the box because of engine's heat and hi- Never leave the key in the storage box. gh temperature.

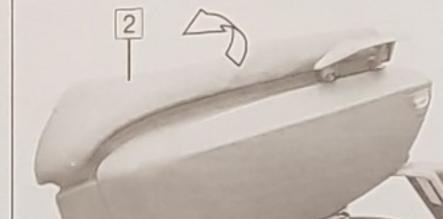

Luggage hooks

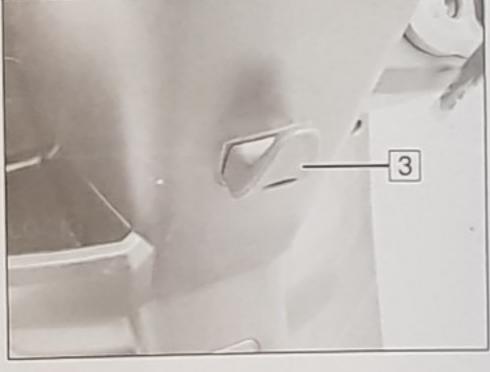

Use the hooks (3) only for small baggage

Unlock

- Insert the ignition key (1) into the lock turn pieces.

- Press down the seat (2) until the lock is
- Pull out the ignition key.

After the seat is closed check if it was locked firmly! -Risk of accidents!

Maximun load capacity: 10 kg



M CAUTION

Maximum load capacity: 1.5 kg Do not transport bulky loads.

Fuel, fuel tank

⚠ WARNING

Fuel is highly inflammable and can explode. Do not smoke or bring a naked flame near the fuel tank.

Fuel expands under the influence of heat and the sun. Therefore, never fill the tank to the brim. Never fill the tank while the engine is running.

Never bring a glowing cigarette or naked flame near an open tank, because fuel vapour could suddenly ignite.

Fuel stock, tanking



Malfunction Indicator Lamp

- When the fault light (2) flashes, indicating that the electronic control system failure, please check with the local dealer.

NOTE

The fuel indicator (1) is active when the ignition is turned on.

The scale with the tank symbol [] remembers for a tank stop.

E = Empty

F = Full


Don't run down the fuel tank until it is empty.


Filling up with fuel


- Use only premium lead-free fuel (min.95 octane)


OVERVIEW AND OPERATION

Tank cap

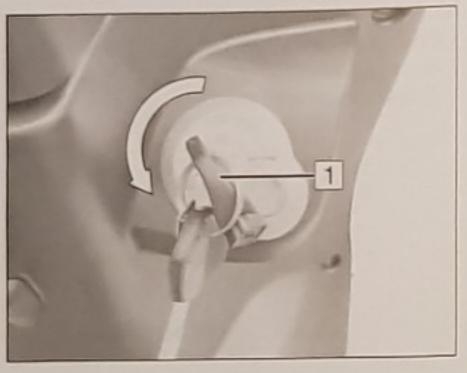

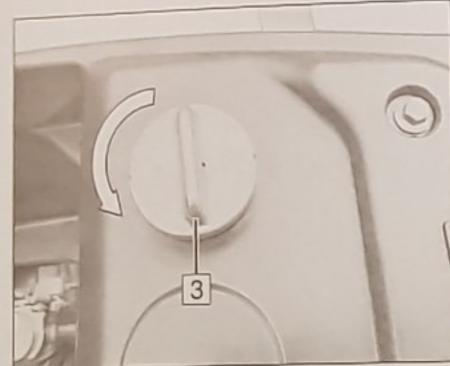

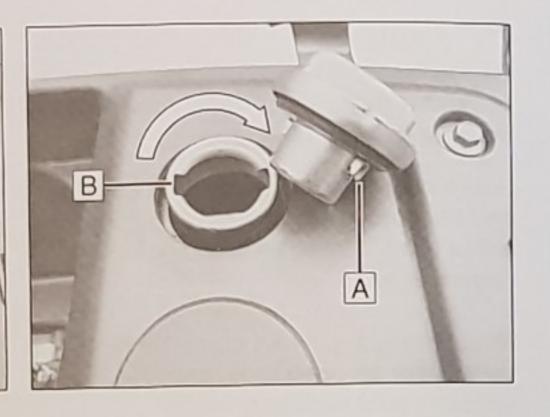

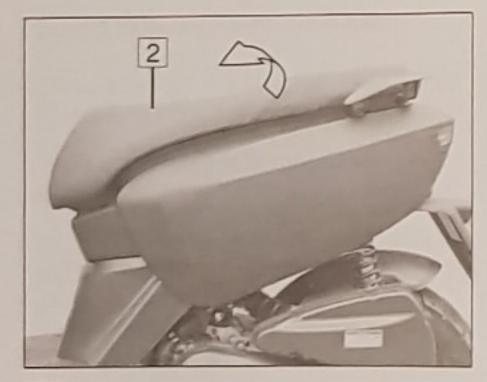


Unlock:


- Insert ignition key (1) into the lock and turn the key to the left, open the seat (2).
- Turn the fuel tank cap (3) counter-clockwised and open the fuel tank cap.


LOCK:

- Align A to B, press the tank cap and turn it clockwised.
- Press down the seat until the lock is engaged.
- Pull out the key.

Side stand and parking stand

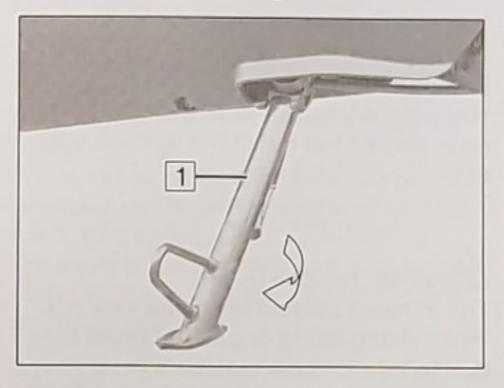

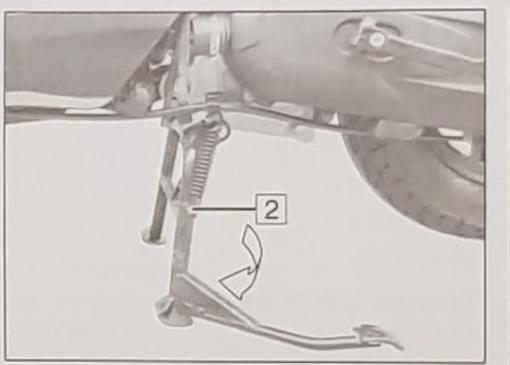

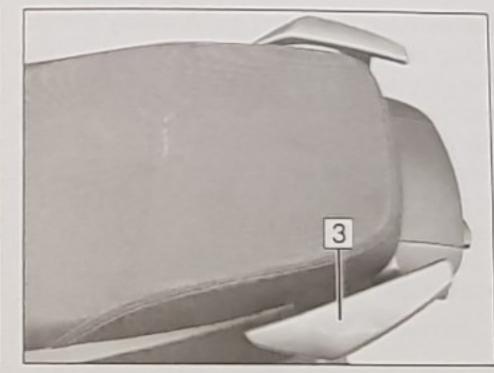

Propping up the scooter on the side stand.

⚠ WARNING

ng on firm ground. On sloping roads, al- gine is shut off and will not start. ways park the scooter facing uphill.

It is essential that the side stand is fold- - Switch off the engine. ed up before starting off ! -Risk of accid- - Put your left hand on the left-hand handleents!

Side stand

NOTE

The scooter is equipped with a side stand Always make sure that the stand is resti- switch. If the side stand is folded up the en-

- bar grip.
- Hold with your right hand the holder grip
- Fold out the arm fo the side stand(1)as far forward as it will go and stop by foot.
- Slowly tilt the scooter to the left until its weight is supported.

Parking stand

- Switch off the engine.
- Put your left hand on the left-hand handlebar grip.
- Hold the holder grip(3)with your right hand.
- Push the parking stand (2) down until the two skids are on the ground.
- Put you full body weight on the operating mandrel of the main standard.
- Pull the scooter towards the rear and simultaneously upwards onto parking stand.
- Check that the scooter is standing firmly.

NOTE

The tank cap is located under the seat.

SAFETY TEST

Checklist

Before each ride, carry out a safety check Before starting your ride, check the followiusing the checklist.

Take the safety check seriously. Carry out maintenance activities before you start your ride or ask a specialized dealer to do so. This will provide you with the certainty that your motorcycle corresponds to traffic regulations. A technically faultless motorcycle is a basic requirement for the safety of both yourself and other road users.

- Steering (smooth and free play)

- Engine oil quantity

- Fuel quantity

- Front brake

- Rear brake

- Tyres (profile and pressure)

- Telescopic fork

- Load / lights

- Total weight

- Lights

- Brake fluid (lever)

- Brake (operation)

In case of problems or difficulties, contact a dealer, who will do everything possible to assist you.

⚠ WARNING

While the engine is running or the ignition is on, do not touch the ignition system.

FIRE HAZARD

The exhaust system becomes very hot. While riding, idling or parking, make sure that to inflammable materials (e . g . hay, leaves, grass, coverings or luggage,etc.) can come into contact with it!

Load / lights

⚠ WARNING

For the sake of your safety, use only original accessories or products released by us.

We cannot judge for each third-part product whether it can be safely used in combination with your scooter.

Nor can a official approval give such a guarantee in all cases, since the test scope is not always sufficient.

NOTE

Our accessories and approved products as well as qualified advice are available from all specialized dealers.

Correctly loaded

- Make sure that the left-right weight distribution is balanced.
- Check that fastenings are correct and tight.
- Do not transport bulky loads.
- Do not cover the lights.



WARNING

The total allowable weight may not be exceeded.

Check the tyre pressure.


Checking the lights

⚠ WARNING

Before any ride, check the operation of all lighting components.

- Check that the headlamps and lenses are clean.

Ride safely

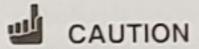

Riding safety is largely also determined by the manner of riding.

Therefore:

- Put on a tested / approved safety helmet and correct close the buckle.
- Wear suitable protective clothes.
- Rest your feet on the footrests.
- Do not ride if your riding ability has been compromised.

Your reactions can be adversely affected not only by alcohol, but also by drugs and medicines.

- Strictly observe all traffic regulations.
- Always adapt your riding speed to the traffic and road conditions.

On smooth, slippery roads take into account that your riding stability and braking power are limited by the grip of the tyres on the road top.

RIDING INSTRUCTIONS

Ride economically and be aware of the environment

and wear of engine, brakes and tyres depe- affic. nd on various factors.

nant for economical fuel consumption and ourable for fuel consumption: exhaust gas and noise generation.

While idling, the engine takes a long time to warm up to operational temperature. In the warm-up phase, however, the wear level and pollutant emissions are very high. It is therefore best to start riding immediately after start-up.

Avoid rapid acceleration

Open the throttle not further than needed,in order to reduce fuel consumption as well as pollution and wear levels.

Do not use excessive revs; change up as soon as possible and do not change down until it is necessary to do so.

Ride as evenly as possible and look ahead as far as possible.

Unnecessary acceleration and hard braking cause high fuel consumption and increased pollution levels.

Fuel consumption, environmental pollution Turn the engine off when waiting in tr-

Different riding conditions affect fuel consu-Your personal riding style is highly determi- mption. The following conditions are unfav-

- High traffic density, especially in big cities with many stops for traffic lights.
- Frequent short rides with repeated starts and warm-ups of the engine.
- Riding in a column of motorcycles at low speed, meaning riding with relatively high revs.

Plan rides ahead of time in order to avoid heavy traffic.

Fuel consumption is also affected by conditions that are out of your control, for instance, poor road condition, hills, riding in winter.

Observe the following aspects for economical fuel consumption:


- The planned inspection intervals must be closely observed.
- Regular service by a specialized. dealer will guarantee not only continued operability, but also economical fuel consumption, low environmental pollution and a long lifespan.
- -Check the tyre pressure every two weeks.

Low tyre pressure increases rolling resistance. This increases fuel consumption and tyre wear and adversely affects riding behaviour.


- Continually check fuel consumption.
- Frequently check the engine-oil level.

Running-in

Running-in instructions for engine and transmission.

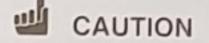

Excessive revs while running-in the engine increases the wear of the engine. Engine faults during the running-in period must be immediately reported to a specialized dealer.

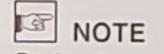

During the running-in period, ride in frequently changing load and rpm ranges. Select winding and slightly hilly routes. Avoid constantly low rpm counts and full throttle under load.

- During the first 500 km: Less than 1/2 throttle.
- Up to 1,000 km: Less than 3/4 throttle.



CAUTION

The first inspection must be carried out immediately after the first 1.000 km.

You can save yourself delays by making an appointment with a specialized dealer in ad-

Running-in new tyres

A CAUTION

New tyres have a smooth surface. They must therefore be roughened by carefully running them in at various slanted positions.

Only then will the surface obtain its full grip!

Running-in new brake linings

WARNING

New brake linings must be run-in and will not have their full friction power until after 500 km.


The slightly reduced braking effect can be compensated for by an increase in the pressure on the brake lever.


During this period, avoid unnecessary hard braking actions.


15

RIDING INSTRUCTIONS

Starting with the electric starter

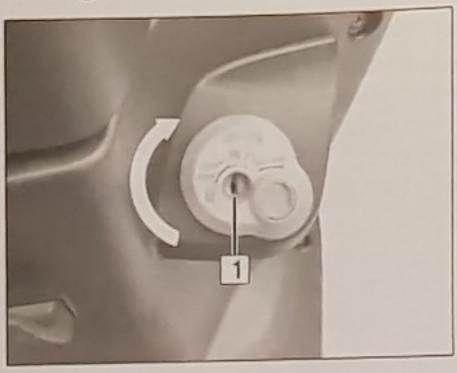

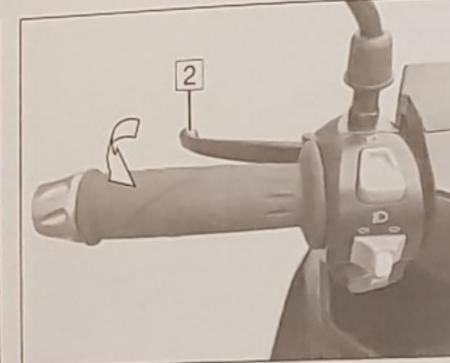


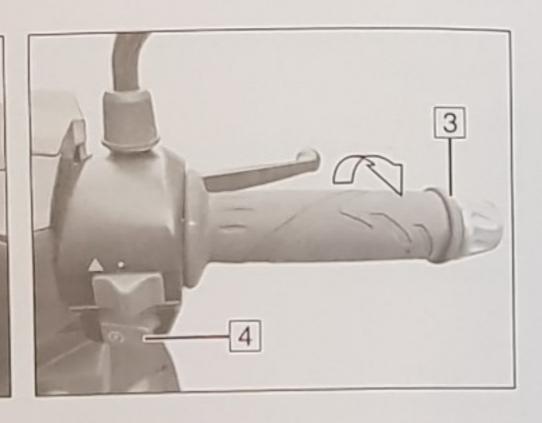

⚠ WARNING

Propping up the scooter with the parking stand. Operate the rear handbrake lever to avoid a moving of the scooter.

Avoid high engine rpm's while the vehicle is standing still, otherwise the clutch will engage.

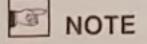

Every scooter is equipped with side stand switch. When the side stand is fold up, can start the engine. When the side stand is re- - Push the scooter off its parking stand. leased, can't start the engine.

Before starting

- Propping up the scooter with the parking
- Turn the Ignition lock (1) with the ignition key to its operating position (). - Do not open the throttle (3).
- Pull and hold the handbrake lever (2).
- Operate the start button (1).
- If the engine can not be started after the starter motor is running for 3-5 seconds, open the throttle(3)1/8-1/4 turns and start again.
- Mount the scooter.
- Release the brake before riding.


M CAUTION


If the engine won't start immediately, release the start button, wait a few seconds and push it again. Each time, push the start button for just a few seconds in order to save the battery. Never push the start button for more than 10 seconds.


⚠ WARNING

Never allow the engine to run in an enclosed space. Exhaust gases are highly toxic and can kill.

Starting with kick starter

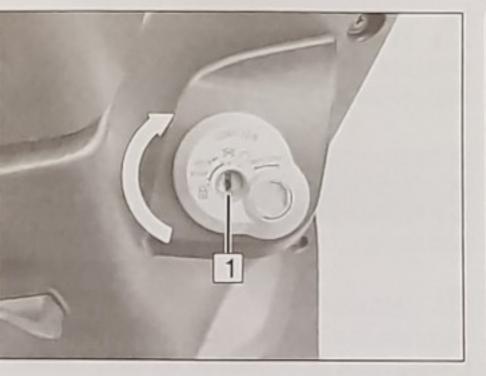

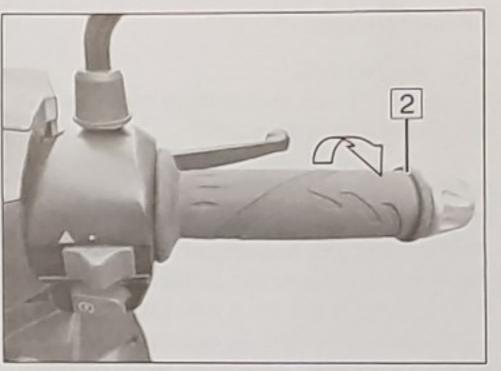

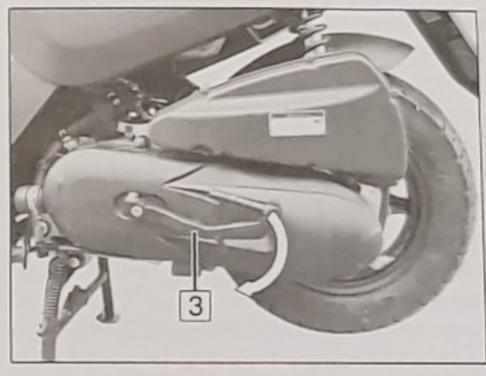

CAUTION

After starting the engine, check that the kick starter lever (3) is returned to its normal position.

- Propping up the scooter when operating the kick starter.
- Turn the ignition lock (1) with the key to its operating position ().
- Do not open the throttle (2).
- Depress the kick starter lever(3)quick and the engine will start.
- After the engine is running return the kick starter lever to its normal position.

NOTE

Use the kick starter from time to time to maintain its function.

RIDING INSTRUCTIONS

Braking

Wet brakes

Washing the scooter or riding through water or rain can delay the braking effect due to wet or (in winter) ice-covered brake discs and linings.

⚠ WARNING

The brakes must first be operated until they are dry. Salt film on the brakes

When riding on salted streets without braking for a while, the full braking effect may be delayed.

Oil and grease

⚠ WARNING

The brake discs and linings must be free of oil and grease!

If the scooter is not used for a while, a rust film may form on the brakes and thus increase the braking effect. A thick rust film can cause the brakes to lock up. When setting out on a ride after a long Iay-up period, carefully operate the brakes several times until they work normal-

NOTE

Make sure you practice braking for emergency situations, but do so where you will not pose a risk to yourself or others(e.g.a deserted parking area).

⚠ WARNING

Operate the brakes to grind off the salt deposited on the brake discs.


Dirty brakes


When riding on dirty streets, the braking effect can be delayed due to dirty brake discs and linings.

⚠ WARNING


Operate the brakes until they are clean. Lining wear is increased by dirty brakes!

Braking

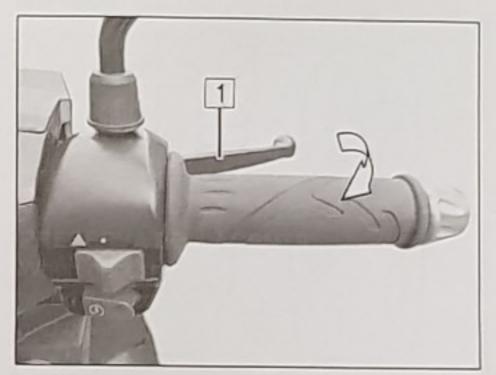

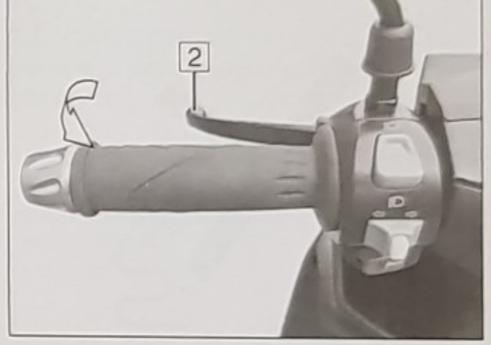

Stopping the engine

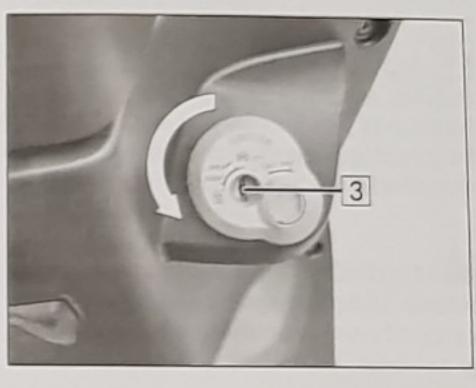

Braking

The front brake and rear brake are operated independently from each other.

The front brake is operated via the right-hand brake lever(1)on the handlebars, and the Brake with care. Locked wheels do not have ke lever(2).


throttle gas and operate both brakes at the sliding. same time.

sphalt and icy roads, use the front brake carefully: if the front wheel locks, the bike will - Pull out the ignition key. slide sideways.


rear brake is operated via the left-hand bra- much braking effect and can lead to skidding / crashing. In principle, do not brake on a curve, but before the curve.

When stopping or slowing down, release the Braking on a curve increases the danger of

- On tight curves, sandy / dirty streets, wet a- Turn the ignition lock (3) with the ignition key to the position X.

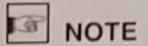

Regular, expert service will help maintain the value of your scooter and is a condition for guarantee claims for corrosion and other such damage.

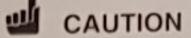

Rubber and plastic parts will be damaged by caustic or penetrating cleaning agents or solvents.



△ WARNING


Always carry out a brake test after cleaning and before starting a ride!



M CAUTION

Do not use steam or high-pressure jet de-

Such devices can damage seals, the hydraulic braking system and the electrical system.

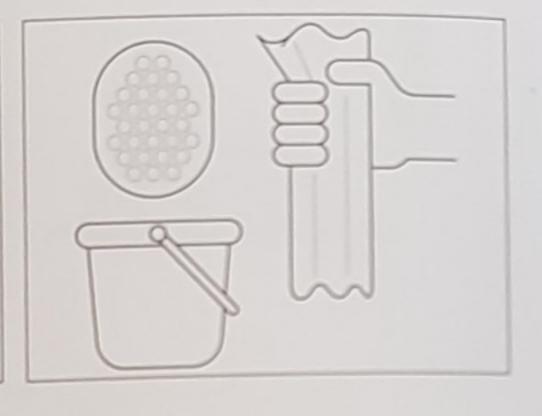

CLEANING

- To wash the motorcycle,use a soft sponge and clean water.
- Afterwards, dry off with a polishing cloth or chamois.
- Do not wipe off dust or dirt with a drycloth. to avoid scratching the paint or covering.

Servicing the scooter / cleaning agents



When necessary, the scooter must be pres-

erved with commercially available preserving

By way of precaution (especially in winter),

regularly treat parts liable to corrosion with

PRESERVATION AGENTS

and cleaning agents.

preservation agents.

M CAUTION

Never use paint-polishing agents on plastic parts.

- After a longish ride, thoroughly clean the chassis and the aluminium parts and preserve them with a commercially available anti-corrosion agent.

Operation in winter and anti-corrosion protection



NOTE

Protect the environment by suing only environmentally friendly preservation agents, and use them frugally.

SERVICE INSTRUCTIONS

Use of the motorcycle in the winter can cause considerable damage due to the presence of salt on the roads.

M CAUTION

Do not use hot water, which would increase the effect of the salt.

- At the end of each ride, wash the motorcycle with cold water.
- Thoroughly dry the motorcycle.
- Treat parts liable to corrosion with waxborne anti-corrosion agents.

20



amage should be immediately

Servicing tyres

If the scooter is not used for a longer period, it is recommended to support the scooter so that its weight is not on the tyres.

You can prevent the tyres from becoming dry and brittle by spraying them with a siliconerubber treatment. First thoroughly clean the

Do not store the scooter or the tyres in hot spaces (such as a boiler room) for longer periods.

⚠ WARNING

A minimum tyre-profile depth of 2.0 mm must be maintained at all times.

Lay-up / commission

Lay-up

- Clean the scooter.
- Remove the battery.

Observe the maintenance instructions.

- Spray suitable lubricants onto the brakelever and clutch-lever joints and the sidestandard and main-standard bearings.
- Rub bright / chromium-plated parts with acid-free grease(Vaseline).
- Store the scooter in a dry room and jack it up so that its weight is not on the wheels.

NOTE

Combine lay-up / commission activities with an inspection by a dealer.

Commission

- Remove the preservation agents from the outside.
- Clean the motorcycle.
- Install the charged battery.
- Preserve the battery terminals with terminal grease.
- Check / adjust the tyre pressure.
- Check the brakes.
- Carry out activities according to the inspection plan.
- Carry out the safety checks.

Technical changes, accessories and spare parts

⚠ WARNING

Technical changes to the scooter can lead to cancellation of the EC operating license.

Should you want to make technical changes, observe our guidelines. This will serve to prevent the scooter from being dam-aged and the traffic and operational safety being retained. A specialised dealer can carry out these activities with meticulous care.

Always consult a dealer before buying accessories or making any technical changes.



CAUTION


We recommend using only approved accessories and original spare parts for our scooter.


This is in your own interests: the safety, suitability and reliability of these accessories and parts will have been tested specifically for the scooter.


Although we keep track of the market, we cannot evaluate nor be held liable for the quality of non-approved accessories and parts, even if they have a certificate of acceptance from an officially recognised technical testing / supervision agency, or a license issued by the authorities.

For approved accessor re parts, see a specialis He will also ensure that nally installed.

Engine oil

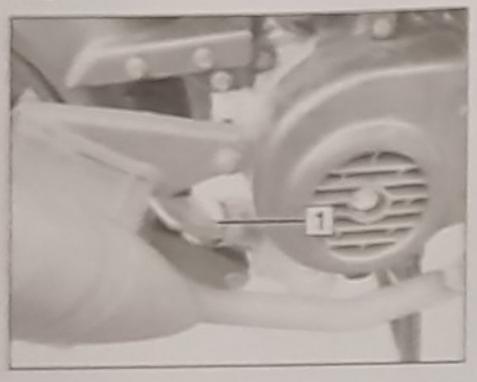

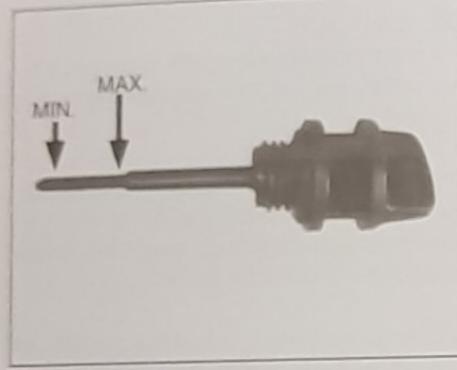

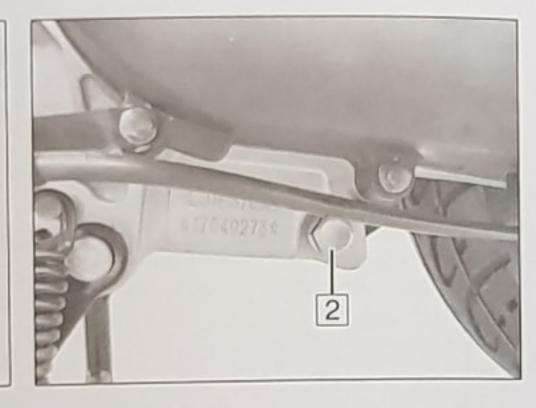


Checking the oil level



CAUTION

Checking the oil while the engine is cold will lead to a wrong measurement and therefore the wrong oil quantity. In order he maximum oil level nor let it drop belo- - Clean the oil filler cap at the MIN-MAX aew the minimum level.

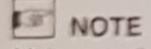

Make sure that the scooter during oil-level checks stands level in all respects. Even the slightest inclination towards the side will produce measurement errors.

- rox. 5 minutes and hold the scooter up-rig- m and maximum marks.
- Propping up the scooter on the parking st-
- to avoid engine damage, never exceed t- ap (1) on the lower right of the crank-case. mark.
 - ra with a clean rag.



CAUTION


For checking the oil level only insert the oil filler cap and don't screw in! Otherwise there will be a wrong measurement in order to avoid engine damage.

- Stop the warmed-up engine, wait for app- The oil level must be between the minimu-
 - Tighten the oil filler cap by hand.

If required, replenish the engine oil SAE 15 - Stop the engine and remove the oil filler c- W/40 via the oil level up to the MAX level

- When change new engine oil, open the oil hole screw (2), till all engine oil is flow out, then tighten the screw (2) and add new oil via the oil level up to the MAX. level mark.
- Tighten the oil filler cap (1).

Engine oil

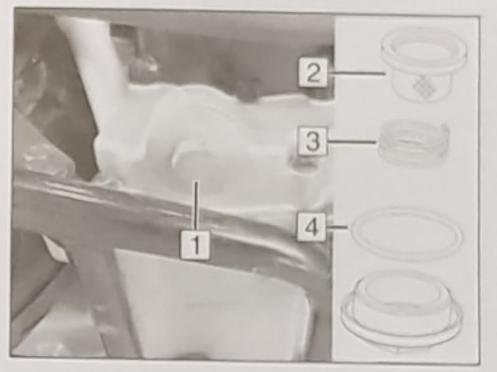

Clean oil filter element

If the oil filter element is also to be replaced or cleaned, perform the following procedure.

- Remove the oil strainer cover (1), spring (3) and oil filter element(2).
- Replace the O-ring (4) new.
- Install the new or clean oil filter element and the oil strainer cover.


Install torque:32 N.m.

CAUTION

Do not use additives . Since the oil also serves to lubricate the clutch, do not use car engine oils supplemented with friction modifiers (such energy-conserving oils can lead to the clutch slipping). Use a suitable, light engine oil for scooters, such as Motorex SAE 15W/40 mineral oil API (SJ or higher).

If required, replenish the engine oil(for classification and viscosity, see the table) via the oil-filler opening up to the maximum level marking.

Engine oil

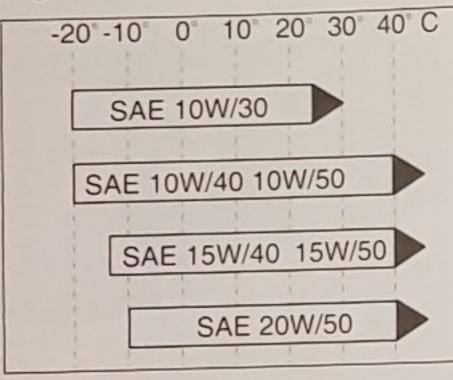



Recommended grade:

Per API:SJ or higher or also with additional release status: ACEA A3/96 (CCMC G5)

Recommended viscosity:


Viscosity depends on the outside temperature. For short while, the temperature may exceed or fall short of the limits of the SAE grades.

The recommended viscosity grade SAE 15 W/40 covers the ambient temperature range -15°C to +40°C and therefore represents the optimum for out latitudes.

Checking the transmission oil level

- Stop the warmed-up engine, wait for approx. 5 minutes.
- Propping up the scooter on the parking stand.
- Remove the oil filler screw (1) and check if the oil level is below the oil-filler opening.
- If required, replenish transmission oil Hypoid SAE 80W-90 via the oil-filler opening.
- When change new transmission oil, open the oil hole screw(2),till all transmission oil is flow out, then tighten the screw (2) and add new oil via the oil-filler opening.
- Tighten the oil filler screw(1).

Checking the steering bearings

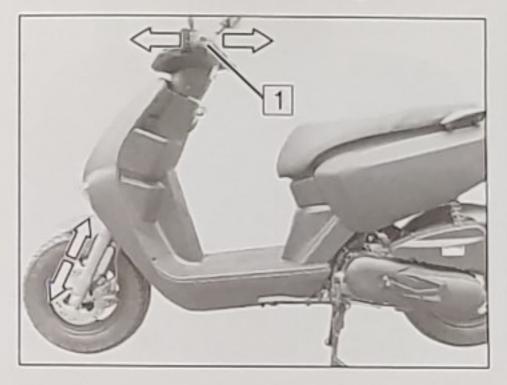

Pull the hand brake to block the front wheel brake.

Now pump the fork girders several times up and down using the handlebar.

- The suspension should respond perfectly.

- Check the fork girders for oil leaks.

Checking the telescopic fork

NOTE

The telescopic fork should not jam up when turned and it should swing back lightly to both end positions.

- Pull the hand brake to block the front wheel brake.
- Hold the handlebar with both hands and try to move the handle bar(1)back and forth.

If the fork column bearing shows noticeable play, it must be adjusted by a specialised dealer.

NOTE

If damage to the telescopic fork or the spring strut is found have the motorbike examined by a professional dealer.

Tyre profile





Checking the tyre profiles

WARNING

Observe the minimum profile depth prescribed by law.

tightened valve caps prevent the tyre fr- of the tyres. om suddenly losing pressure.

- Measure the profile depth at the centre (2) of the tyre's tread.

Recommended minimum profile depth: 2.0 mm

Observe the wear marks(3).

Checking the tyre pressure

⚠ WARNING

Adjust the tyre pressure according to the total weight load. Never exceed the r-Never ride without valve caps(1). Firmly ated total weight or the bearing capacity

Incorrect tyre pressure will have a considerable effect on the riding properties of the scooter and the lifespan of the tyres.

- While the tyres are cold:
- Twist off the valve caps.
- Check / adjust the tyre pressure.
- Twist on the valve caps.

Tyre pressure

One Rider: Front: 1.75Kg/cm² Rear: 2.00Kg/cm² by the same manufacturer.

Two Rider: Front: 2.00Kg/cm2 Rear: 2.25Kg/cm2

Tyre size


The standard scooter is provided with the following tyre sizes:

Front 110/70-12 53J or 47J or 47P or 47N 110/70-12 53J or 47J or 47P or 47N


⚠ WARNING

Use only tyres approved by the manufacturer. The use of non-approved tyre brands, types or sizes leads to the operating permit of the vehicle becoming null and void. Use only pairs of tyres produced

Front wheel brake

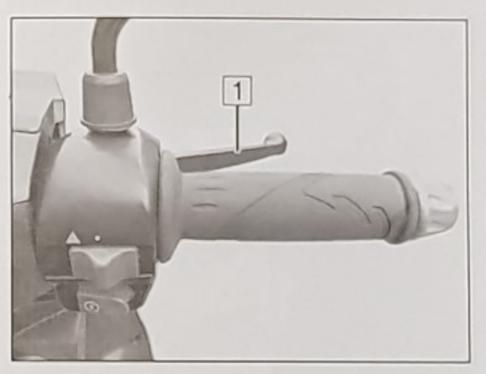

Front brake-fluid tank

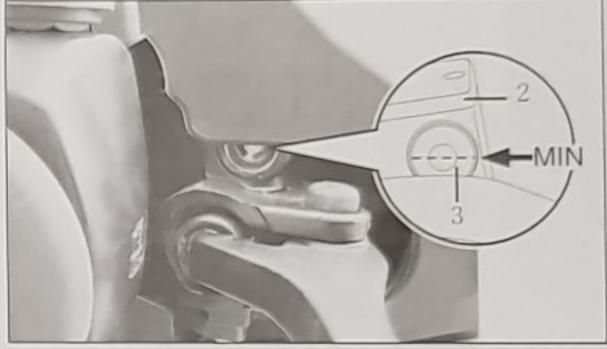

⚠ WARNING

Sudden changes in play or a spongy feel of the brake lever (1) can be caused by faults in the hydraulic system.

Do not ride on when in doubt about the operability of the brake system. Immedi- fluid of the DOT 4 classification. ately consult a dealer.

Checking the brake-fluid level

⚠ WARNING

Every two years, the brake fluid must be changed by a dealer. The level must not drop below the MIN mark. Use only brake

- Turn the handlebars until the brake-fluid tank (2) is level.


- The brake fluid level(3)should be between the minimun (MIN) and the maximum marking (MAX).

- If air bubbles can be seen, check the brake linings for wear; if necessary, replenish the brake fluid by a dealer.


CAUTION

Do not spill any brake fluid on painted or plastic surfaces as it will demage the surface severely.


Front wheel brake

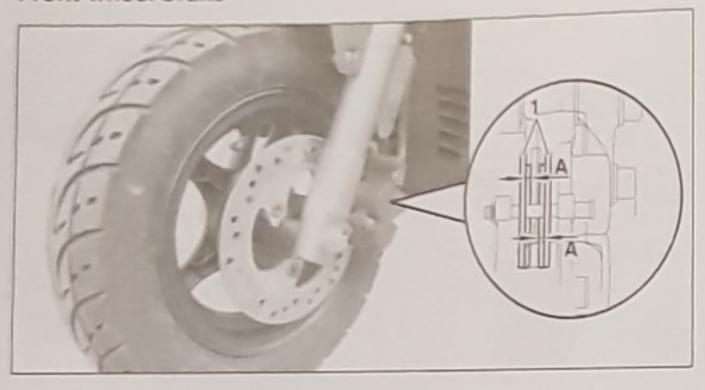

Checking the brake linings

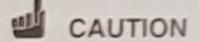

The minimum lining thickness must be maintained

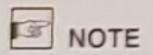


For your own safety, we recommend having activities to the brake system carried out by a dealer.

- Check the thickness of the brake lining.

Minimum thickness: A = 2.0 mm

- If the lining thickness is below the minimum, have the brake lining (1) replaced by a dealer.

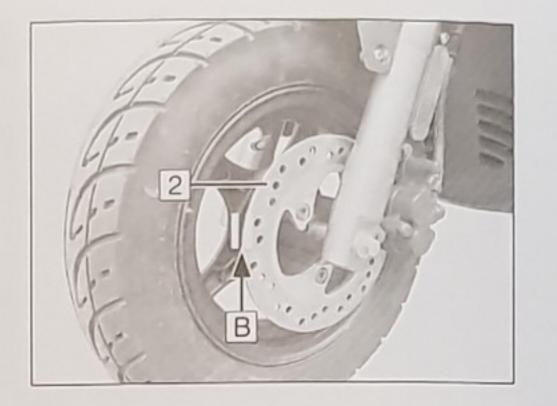


Checking the disc brake


- Visually inspect the disc (2).
- Check the thickness of the disc.


Minimum thickness: B = 3.0 mm

- If the disc thickness is below the minimum, have the disc (2) replaced by a dealer.

Rear wheel brake

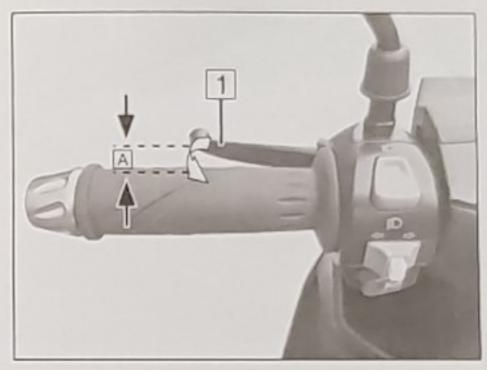

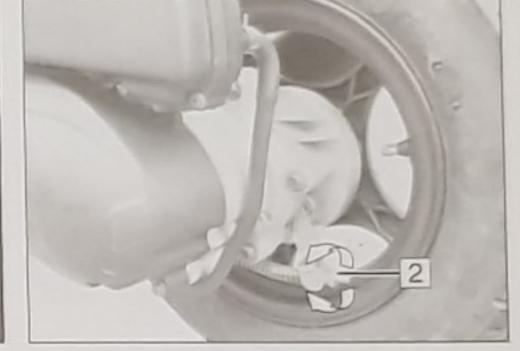

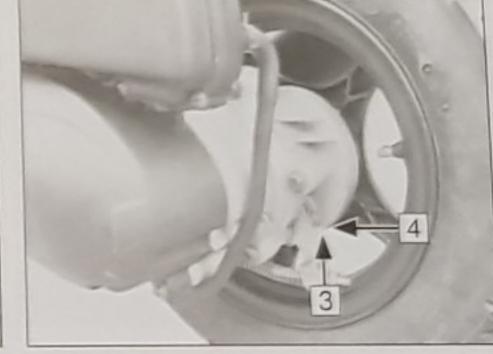


Adjusting the rear wheel brake



M CAUTION

For your own safety, we recommend having activities to the brake system carried out by a dealer.

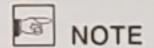

After a longer period of operation, adjustment of the brakes is essential due to natural wear of the brake-shoe linings.

Checking

- An external sign of the brakes needing adjustment is the constantly increasing free travel (A) of the handbrake lever (1) 10-20 mm.

Adjusting

- Screw the nut (2) on the rear-wheel brake onto the brake rod until the handbrake lever reach a free travel of 10-20 mm.
- After this measurement is attained, the brake shoes should be heard brushing against the brake drum.



CAUTION

Have a dealer check the adjustment. Checking the brake linings.



CAUTION

The thickness of the brake lining may not be lower than the minimum value. Operate the handbrake lever(1) and visu-


ally inspect it.


Check the thickness of the lining:

The extension of the wear indicator (3) at the brake lever must be in front of the minimun mark of the scale(4)when the rear brake is depressed.

If the thickness of the lining has fallen below the minimum, have a specialised dealer replace it.

Adjusting the play of the twist grip throttle control

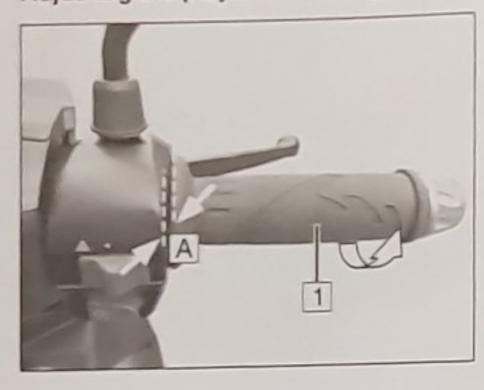

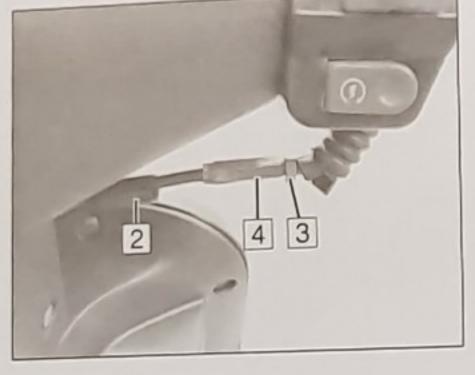

Check:

- Check the throttle cable for light move-ment by turning the twist grip(1)from closed to - Slacken the lock nut (3) on the handlebar. open position.
- Move the handlebar to check whether the throttle cable moves freely.
- Check whether the throttle cable is obstru- Check the play. cted by other parts.
- Open the twist grip throttle control until resistance can be felt.
- Measure the play. Nominal value: A = 3-5 mm


Adjustment:


- Push back the protective cap (2).
- Turn the setscrew (4) accordingly.
- Tighten the lock nut (3).
- Push over the protective cap (2).

NOTE

If the play cannot be corrected this way, have the scooter checked by your dealer.

Cleaning the air filter

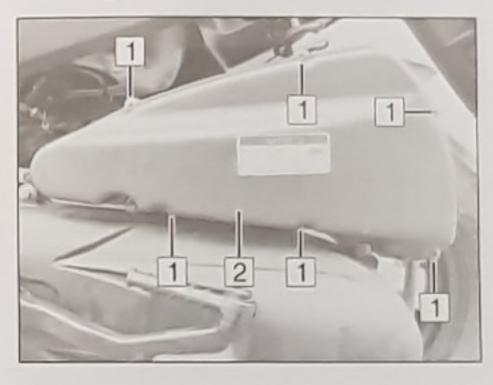

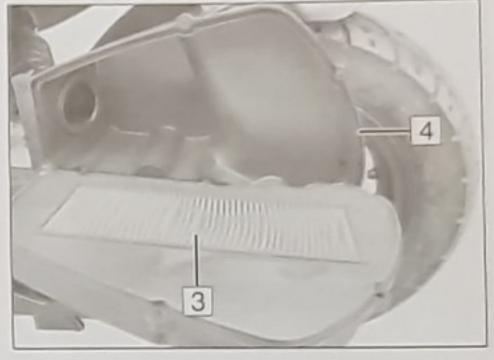



NOTE

The scooter is attached with a oil foam air filter. In case of heavy dirtiness the foam(3) has to be replaced.

Disassembly and cleaning

- Remove the screws (1) and take off the air filter cover (2).
- Remove the foam (3).
- Clean the foam with Motorrex air cleaner.
- Afterward soak and wring out the foam with air filter oil.

Installation

- Clean the hole (4) before installation.
- Usually the installation takes place in reverse order to disassembly.


CAUTION


Never run the engine without air filter.


- Dust depsit is one of the major causes of reducing output horsepwer and increasing fuel consumption.
- Change the air cleaner element more frequently to prolong the engine's service life if the scooter is ride on dusty roads very
- Check for properly installation of the foam housing in the filter case.
- Otherwise the engine runs poorly or lead to serious engine damage.
- Be careful not to soak the air cleaner when washing the scooter. Otherwise it will cause engine hard to start.

The air inlet of oil-gas separator (5) connects with cylinder breath pipe, air outlet connects with air filter port, oil discharge outlet should face to the ground. If there's too muchoil in the oil discharge pipe, please release the oil and check the oil measure tape if the engine oil is enough.


Checking the spark plug

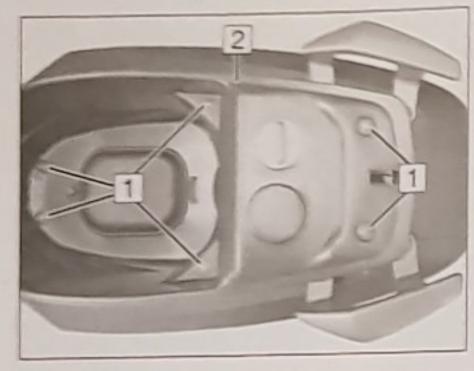

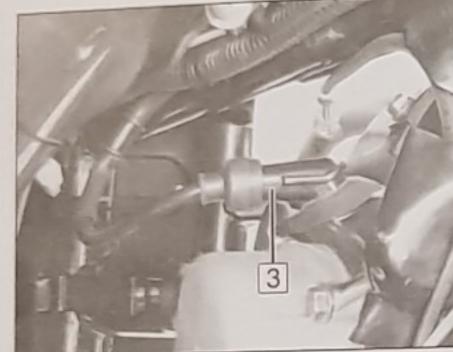

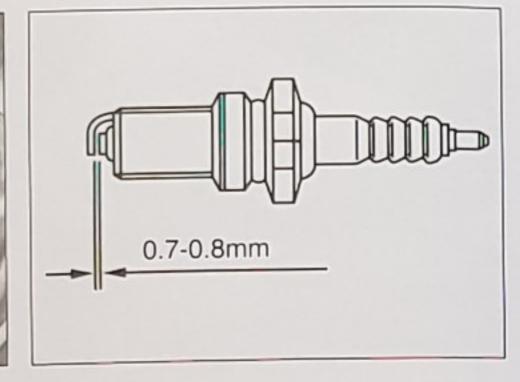

Check and change

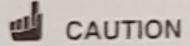

Check or change the spark plug only when the engine is cold.

storage.

- Take off the storage (2) with the seat.
- Pull the spark plug connector (3).
- Unscrew the spark plug with the spark wrench from the on-bord toolkit.
- Check the electrode gap (0.7-0.8mm) replace the spark plug if it is severely burnt a-
- Use a new spark plug NGK CR6HSA and tighten up.


- Remove six nuts (1) with washers from the - Screw in the spark plug by hand and then tighten up with the spark wrench.

Torque 11 Nm.


- Plug in the spark plug connector (3).

NOTES ON MAINTENANCE

Checking the fuse

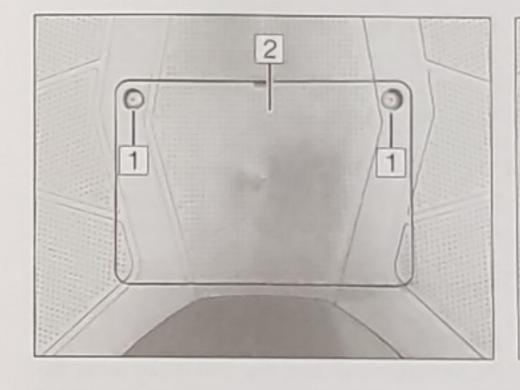



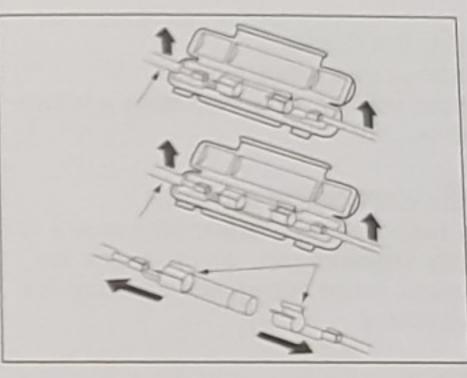


CAUTION

Never install a fuse with a larger rating, since this could destroy the entire electrical system.


The fuse is inside the storage.

- Turn off the ignition.
- Remove the screw(1)and open the inspection cover (2).
- Open the fuse case (3) and remove the fuse.
- A faulty or blown fuse must be replaced by a new one with 15 A.
- Check the fuse for correct contact. Loose fuse will blow.


Installation takes place in reverse order to disassembly.

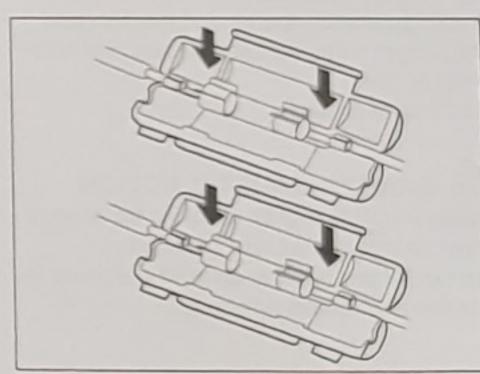


Battery

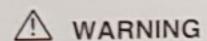

Always wear safety glasses. Keep children away from acids and batteries.

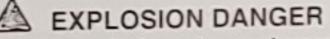

A battery being charged produces a highly explosive gas, which is why fire, sparks, naked flames and smoking are prohibited.

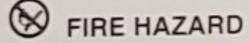


Avoid generating sparks and electrostatic discharges when handling cables and electrical devices.

Avoid short circuits.

DANGER-CAUSTIC ACTION

Battery acid is highly caustic, so always wear safety gloves and glasses. Do not tilt the battery as acid can leak from the ventilation openings.

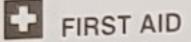

If acid comes into contact with an eye,immediately flush the eye for several minutes with fresh water. Then immediately visit / call a d- ity (Ah).

ly be neutralised using acid converter or soap suds, and the spots must be flushed with plenty of water.

If acid is swallowed, immediately visit / call a doctor.

M CAUTION

Do not expose batteries to direct sunlight. Discharged batteries can freeze, so they must be stored in a place where the temperature remains above 5°- 15°C. Professional maintenance, charging and storage will increase the lifespan of the

battery and are a condition for the honouring of guarantee claims. WARNING



Take a dead battery to a collection point. Never dispose of one with household ref-

Charging the battery


After a long lay-up(3-4 months), charge the battery. The charging current (in amperes) must not exceed 1/10" of the battery capac-

The battery must not be fast-charged. The Acid on the skin or clothing must immediate- battery may only be charged using a special charger approved for MF batteries.

Maintenance

Although the battery is maintenance-free. Never leave the battery discharged. Keep the battery clean and dry and make sure that the connection terminals are firmly seat-

Removing and installing the battery

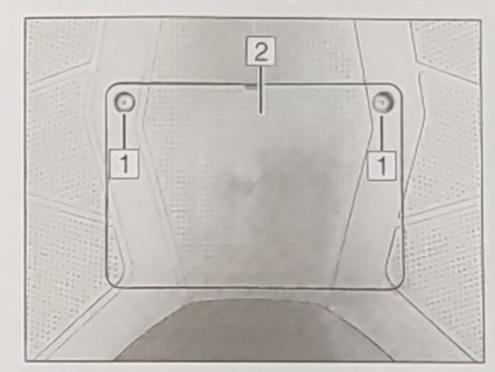



CAUTION

The battery may only be connected or disconnected while the ignition is inactive.

- Turn off the ignition.
- Remove the four screw(1)and open the inspection cover (2).

First disconnect the minus terminal (3, black cable).

- Disconnect the battery.
- Remove the battery.

Installation takes place in reverse order to disassembly.

When installing the battery, first connect the plus terminal (4, red cable).


The battery is maintenance-free. Do not try to open it.

NOTES ON MAINTENANCE


Headlight





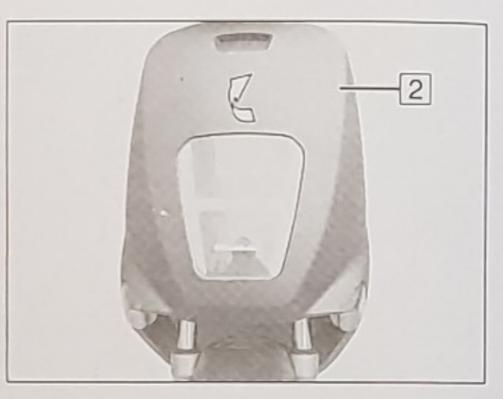


Changing the bulb

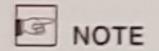


Use only tested,incandescent bulbs with th- - Disconnect the plug (3). e 'E' designation. Use of non-approved bul- - Remove the screw (4) take off the bs will void the operating license. Do not to-headlight (5). uch the bulbs with bare fingers. Hold bulbs with a clean, dry cloth when installing or removing them.

Low beam-high beam bulb: 12V 12W/12W

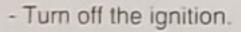



- Remove the screw (1).
- Take off the headlight cover (2).


Installation takes place in reverse order to disassembly.

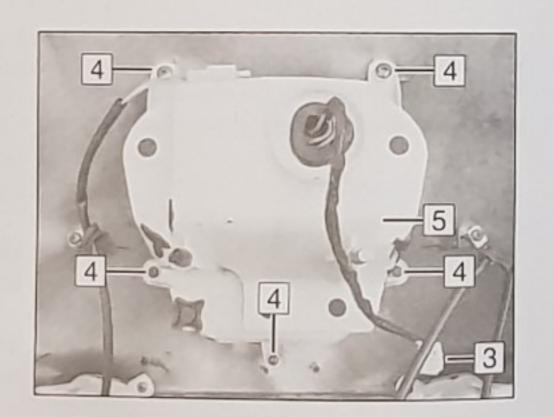


Front indicator

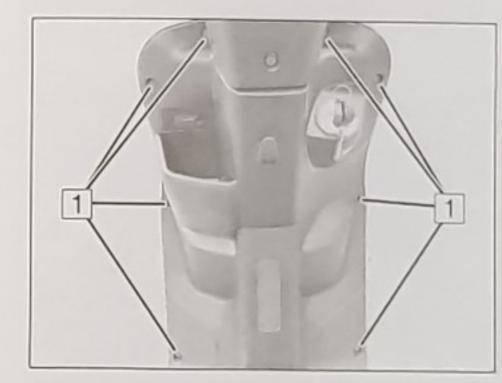

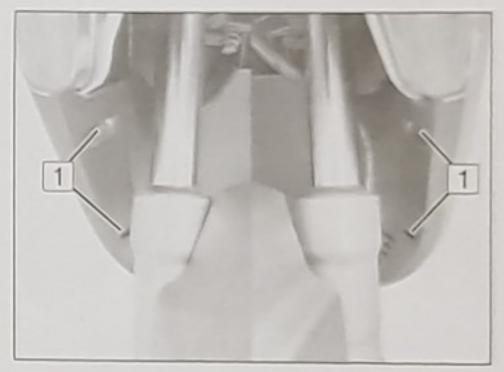

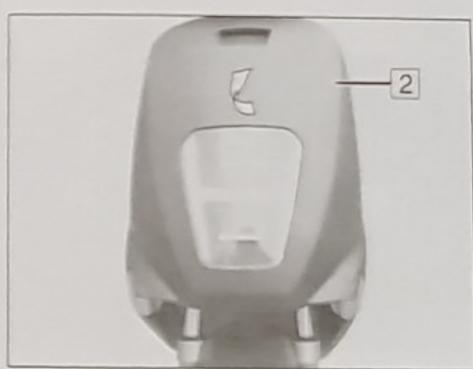

Changing the bulbs

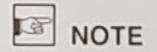


Do not touch the bulbs with bare fingers. Hold bulbs with a clean, dry cloth when ins- - Remove the screw (4) take off the talling or removing them.

Front indicator


- Remove the screw (1).
- Take off the headlight cover (2).
- Disconnect the plug (3).
- turn light (5).


Installation takes place in reverse order to disassembly.


Bulbs: 12V 2.4W

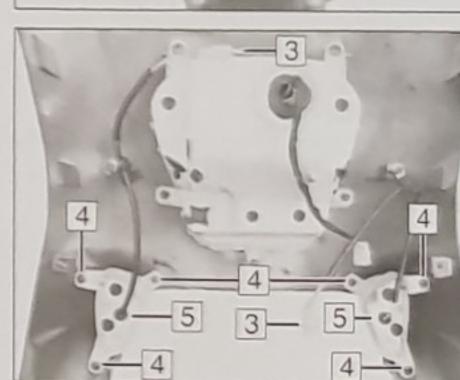

Rear indicator and Tail / brake light

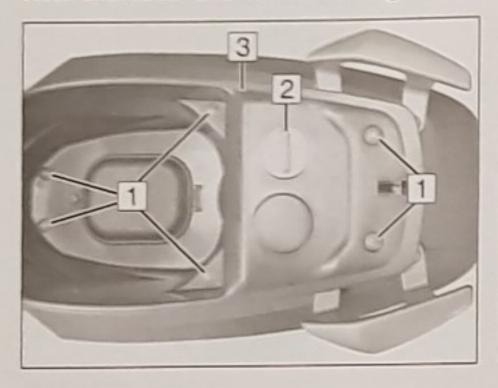


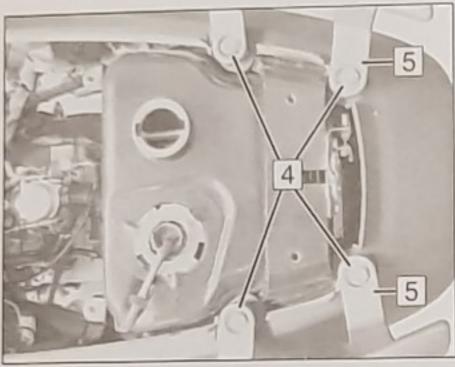

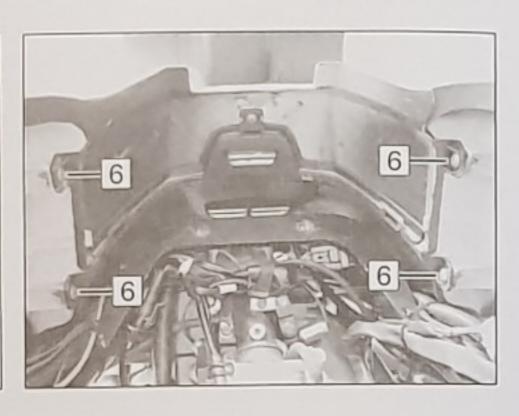


Rear indicator


- Open the seat.
- Remove six bolts (1) with washers from the Remove the screws (6) . storage, take off the fuel tank cap (2).
- Take off the storage (3) with the seat.
- Remove four bolts with washers (4) and take off the rear armrests (5).

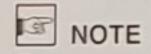



Do not touch the bulbs with bare fingers. Hold bulbs with a clean, dry cloth when installing or removing them.

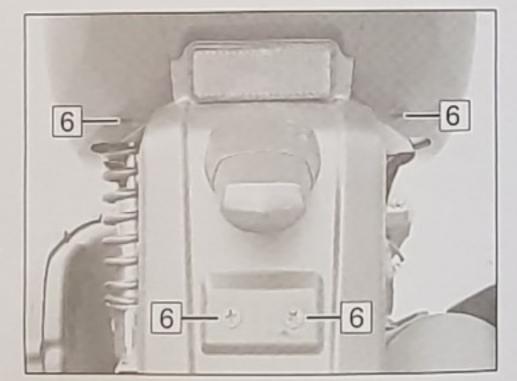

Rear indicator and Tail / brake light

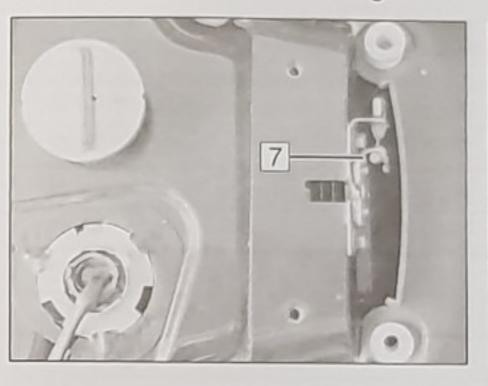

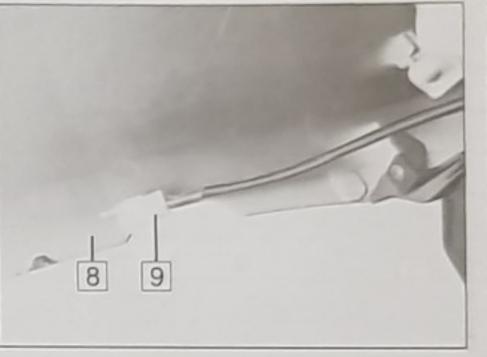


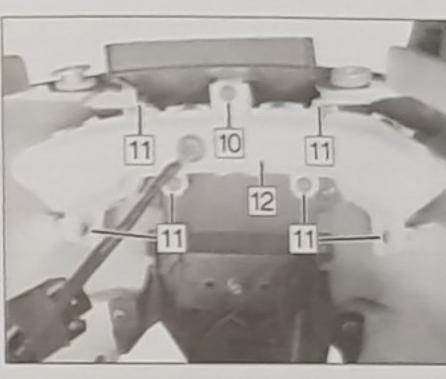

Rear indicator

- Take off the seat cable (7), lift up to remove the left and right side covers (8),take off the tail light connecting wire (9).
- Remove the screws (10) and take off rear talling or removing them. center cover.
- Remove the screws (11) and take off rear indicator (12).


Installation takes place in reverse order to disassembly.

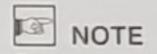


Do not touch the bulb with bare fingers. Hold bulbs with a clean, dry cloth when ins-

bulbs: 12V 3.6W / 12V 2.4W 12V 3.1W

Check the headlamps

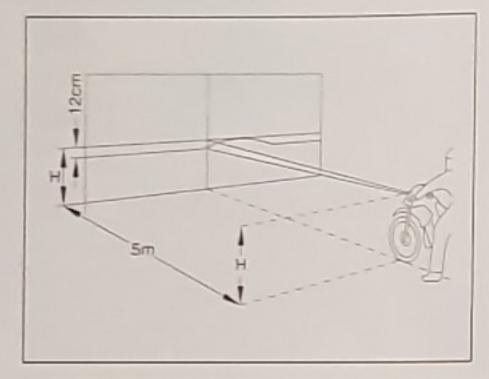

Adjusting the headlamps

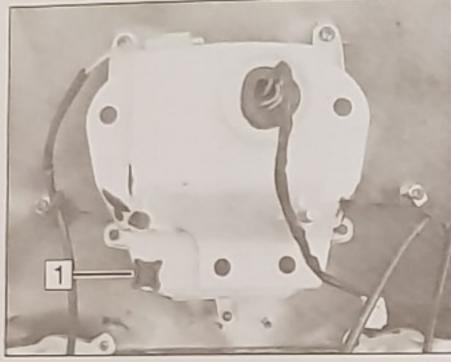

NOTE

If you have problems adjusting the headlamps, see a specialised dealer. An incorrect adjustment is punishable by law. Remember, you are responsible for the correct adjustment of the motorbike's headlamp.

♠ WARNING Do not run the engine in an enclosed space (risk of asphyxiation).

Position the motorcycle on a level floor 5 m - Adjust the bolt (1) to adjust the illuminating (measured from the headlamp) from a light coloured wall with a rider seated on the motorcycle and the tyres filled at the correct p-

- Measure the distance from the floor to the centre of the headlamp and mark the height on the wall with a cross Draw a second cross 12 cm beneath the first cross.

- Start the scooter and run the engine.

- Activate the dipped beam.

angle of the headlamp.

	LJ50QT-N				
Engine type	LJ1P37QMB				
Construction:	One cylinder 4-stroke petrol engine				
Pistion displacement:	49.46 cm³				
Bore:	ф 37 cm				
Stroke:	46 cm				
Compression ratio:	12:1				
Cooling:	Fan air cooled				
Maximum net power output:	45km/h: 2.9 kW / 8000rpm 30km/h: 2.9 kW / 7500rpm				
Maximum net torque:	45km/h: 3.5 Nm / 7500rpm 30km/h: 3.8 Nm / 7000rpm				
Ignition system:	ECU				
Spark plug:	NGK CR6HSA				
Electrode gap:	0.7-0.8 mm				
Carburettor:	SVB18 18M				
Idle speed:	1900±100 r/min				
Air-filter:	Paper filter element				
Type of starter:	Electric starter and kick starter				

TECHNICAL DATA

	LJ50QT-N
Power transmission	
Clutch:	Centrifugal type
Transmission:	CVT
Chassis	
Scooter version:	LJ50QT-N
Front suspension:	Telescopic fork
Rear suspension:	Unit swing, hydraulic shock absorption
Wheels front:	Light metal (Alu) MT 2.5×12 or 2.75×12
Wheels rear:	Light metal (Alu) MT 2.5×12 or 2.75×12
Tires front:	110/70-12 53J or 47J or 47P or 47N tubeless
Tires rear:	110/70-12 53J or 47J or 47P or 47N tubeless
Tire pressure:	One Rider: Front: 1.75Kg/cm ² Rear: 2.00Kg/cm ² Two Rider: Front: 2.00Kg/cm ² Rear: 2.25Kg/cm ²
Brakes, front:	Disc brake ϕ 190 mm
Brakes, rear.	Drum ф 110 mm

	LJ50QT-N				
Lubricants and operating fluids					
Fuel tank capacity:	6.2 Liters				
Fuel:	Unleaded fuel min. 95 octane				
Engine oil:	SAE 15W/40 mineral oil API (SJ or higher)				
Filling quantity:	0.8 litres				
Transmission oil:	Hypoid-oil SAE 80W-90 API GL4				
Filling quantity:	0.14 litres				
Electrical Equipment					
Generator:	12V 119W				
Battery:	12V 7Ah MF				
Fuse:	15A or 10A				
Head light:	12V 12W/12W				
Front turn signal light:	12V 2.4W				
Brake/rear light:	12V 3.6W / 12V 2.4W				
Rear turn signal light:	12V 3.1W				

	LJ50QT-N
Dimensions and weights	
Overall length:	1765 mm
Width across handlebars:	670 mm without rear view mirror
Maximum height:	1100 mm without rear view mirror
Wheel base:	1275mm
Seat height:	765mm
Weight empty:	87 kg
Weight in running order:	93 kg
Max. permitted total weight:	253 kg
Top speed:	45 km/h or 30km/h

Warranty conditions

In case of an occurring fault we will provide the customer with the following performances through the authorized dealer (seller) within the scope of its statutory warranty obligations:

1. Within warranty period, we will rectify any deficiencies caused by material or manufacturing faults through the authorized dealer (seller) by repairing or replacing the affected part according to the statutory warranty regulations. We may deny the requested repair or replacement of the faulty part if this would only be possible with disproportionately high costs. In this case we rectify the deficiency through the authorized dealer (seller) by applying the other possible type of subsequent fulfillment. If both types of subsequent fulfillment are only possible with unproportionately

high costs, we deny the subsequent fulfillment all-together through the authorzied dealer (seller). The customer is then entitled to legal claims. Replaced parts pass over into the possession of us.

- 2. The installation of spare parts within the scope of warranty does not extend the warranty period that has started with the date of delivery of the motorcycle.
- 3. The warranty does not cover normal wear and tear caused by normal use as well as wear and tear caused by inappropriate handling and inappropriate use. Oxidation and corrosion are caused by environmental influences and are also not covered under warranty.
- 4. Warranty claims lodged by the cuistomer will be rejected in case of: Manipulations to the motorcycle, installation of a different exhaust system, changes to the gearbox or secondary transmission ratio and

installation of accessories or spare parts which have not been approved by us. Repairs carried out in workshops not authorized by us and the non-compliance with the maintenance intervals in the workshop of an authorized dealer will also cause the rejection of warranty claims.

- When lodging a warranty claim the customer must present the correctly filled in service book to the seller.
- The following table gives the customer an overview of the average limits of the respective wear parts.

WARRANTY

List of wear parts

Wear parts	Wear limits				
Tires, houses, rims	depending on riding style, load and tire pressure the wear limit may already be reached after only 500 km or even earlier.				
Wheels, hubs	depending on riding style, load and tire pressure the wear limit may already be reached after only 1500 km or even earlier. Check during each maintenance. Oxidation is a lack of maintenance!				
Oils, air filter, leakage inspection on engine	during the first inspection, then with every maintenance interval(every 3000 km/6000 km). Check oil level before every ride.				
Spring fork, spring strut	Cleaning / inspection during every maintenance.				
Lamps, incandescent bulbs, electric system	depending on road conditions / unevenness of the road surface the lifetime will reduced, this may already occur after 500 km.				
Barke linings, brake shoes, brake lines	depending on riding style and load these may already be worn after 1500 km, in cross-country operation even earlier.				
Sedal rings, sealants, O-rings	must be replaced during each maintenance interval to ensure proper function.				
Radial seals on engine, gearbox, fork and wheels	depending on road conditions and care wear may start after 500 km. Dirt reduces the lifetime. Do not clean with a high pressure cleaner!				
Wheel bearings, steering bearings	depending on road conditions and care wear may start after 1500 km. Soiling of the wheel hub reduces the lifetime. Check during each maintenance interval, do not clean with a high pressure cleaner!				
Swing arm bearing	depending on load and care after 1500 km, check with every maintenance.				
Cables	depending on care starting after 500 km. Check with every maintenance.				
Coverings	Plastic parts will be damaged by caustic or penetrating cleaning agents or solvents.				

List of wear parts

Wear parts	Wear limits with each maintenance interval.				
Air cleaner, oil filter					
Starter battery, batteries, fuses, starter brushes	depending on ambient temperatures failures can be expected in the 6th month, when used for short rides even earlier.				
Mirror glasses	depending on ambient temperatures and care failures can be expected in the 6th month in winter operation even earlier. Oxidation is a lack of maintenance!				
Bowden cables,brake cables,throttle cables	depending on use and care from the 6th month				
Self-locking nuts, cotter pins locking plates bonded screw connections	during each maintenance interval or after unscrewing the nut or unlocking the loc				
Variomatic, CVT, rolls, belts	depending on riding style and load these may be worn after 500 km.				
Clutch linings / friction discs	depending on riding style and load these may be worn after 500 km.				
Pistons, cylinders, crankshaft, conrods, engine bearings	depending on riding style, load and care these parts may be worn after 200 hours. When riding mainly with full throttle even earlier.				
Spark plug	with each or every second maintenance interval.				
Exhaust system, inspection of mountings	depending on use and care from the 6th month, in winter and short distance operation even earlier. Oxidation is a lack of maintenance!				

INSPECTION PLAN

Please observe the following:

- During and after the warranty period all inspections should solely be performed by a specialised dealer approved by us.
- Observe the inspection intervals and have the specialised dealer confirm them on the guarantee certificate.
- Use only original spare parts.

all l

CAUTION

In case of non-compliance the warranty will become null and void.

The various activities carried out are listed on the inspection plan.

During the warranty period the following inspection intervals must be complied with:

At 1,000 km (1st service)

Every 3,000 km / or after 6 months

Every 6,000 km / or after 12 months

After the warranty period the inspection intevals specified in this manual must be applied as follows:

Every 3,000 km / 6 months Every 6,000 km / 12 months ⚠ WARNING

For safety reasons, do not carry out any repair or adjustment activities to the scoter and chassis that exceed a closely restricted scope. Tinkering with safety-relevant parts could threaten the safety of yourself and third parties.

This applied especially to the exhaust system, carburettor, ignition system, fork column, brake system and lights.

Before starting work on the electrical system, disconnect the minus terminal of the battery.

I = Inspection, cleaning, and adjustment

A = Replacement

R = Cleaning (replaced if necessary)

S = Lubrication

Component Assembly	Before each trip	1 st service after 1000 km	Every 3.000 km / 6 months	Every 6.000 km / 12 months	Every 12.000 km / 24 months
Air cleaner foam	1	1	R		A
Oil filter (screen)			R		
Engine oil	1	A	Α		
Fuel filter	1	1	1		A
Spark plug	1	1	1		
Ignition time		1	1		Α
Valve clearance		1			
Compression check			1		
Carburetor (Idle speed)	1	1			
Throttle cable adjustment	1		-		
Transmission oil	1	A			
Transmission check for leakage	1	1		Α	
Crankecase check for leakage					
Crankecase vetilation		1			
Driving belt, fight weight					
Clutch discs				I/A	
				I/A	

1 = Inspection, cleaning, and adjustment

A = Replacement

R = Cleaning (replaced if necessary)

S = Lubrication

Component Assembly	Before each trip	1 st service after 1000 km	Every 3.000 km / 6 months	6.000 km / 12 months	Every 12.000 km / 24 months
Bolts and nuts (engine)	1	1	1		
Compression teat			1		
Exhaust system		1	1		
Fuel tank, fuel hoses	1		1		
Battery	1	1	1		
Stearing and bearings		1	1		
Front and rear suspension	1	1		1	
Shock absorption		1		1	
Tire pressure		1	1		
Brake function, brake pads	1	1	1		
Brake fluid	1	1	1		A / every 2 years
Main-and side stand	1	1	I/S		7,010.7-7
Bolts and nuts (chassis)	1	1			